

# Preparing your ETHOS radio to use ETHOS Suite to upgrade Bootloader.

---

## STEP 1

Firstly check your **[Bootloader]** version. Ensure the USB cable is disconnected from the radio, then hold the **[Power]** and the **[Enter]** buttons at the same time to enter the Bootloader mode. The version is shown on the upper right corner of the screen. If **lower than [1.2.10]**, then a bootloader upgrades is needed.

## STEP 2

Go to the **[ethos.frsky-rc.com]** homepage, and download the **[ETHOS Suite]** program.




## STEP 3

After the installation is complete, please connect the radio to the PC through a USB-C cable ensuring the radio is **[turned off]**.

### STEP 3.1

If ETHOS Suite can read the radio successfully **[DFU Flasher]** appears in the side menu bar, demonstrating that the PC drivers are working correctly;

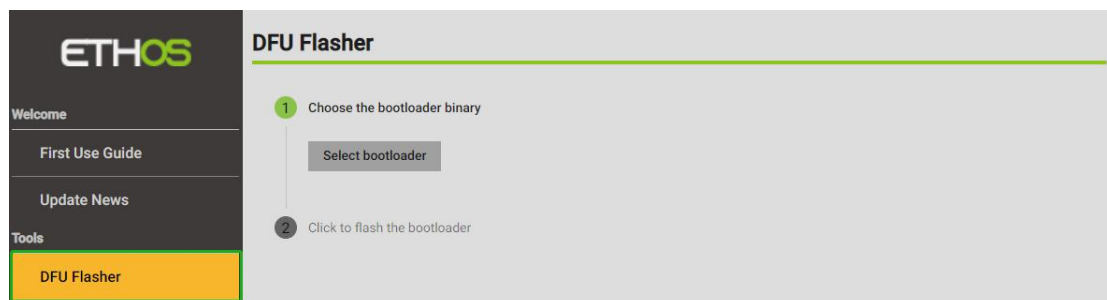

### STEP 3.2



If ETHOS Suite **[Fail]** to recognize the radio, please refer to the **[Help Thread]** for the reference <https://intofpv.com/t-resetting?pid=130476#pid130476>, then **[repeat the STEP 2]**.

## STEP 4

Download the **[RadioModel\_BOOTLOADER]** file for the corresponding radio type via GitHub.  
Download link: <https://github.com/FrSkyRC/ETHOS-Feedback-Community/releases/tag/1.2.10>


### STEP 5

**[Unzip]** the downloaded file, and **[Select bootloader]** .frsk file to upgrade through the **[DFU Flasher]** menu.

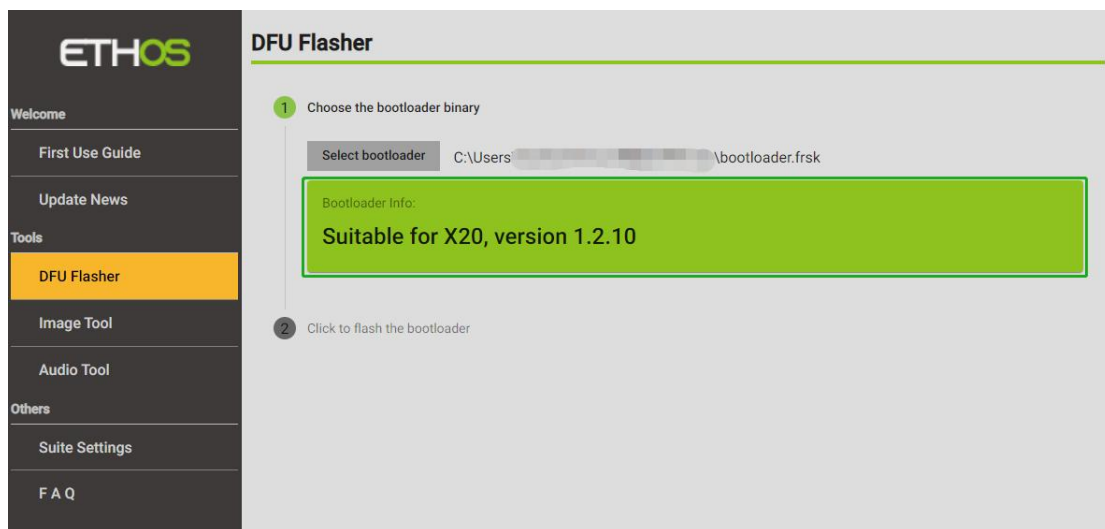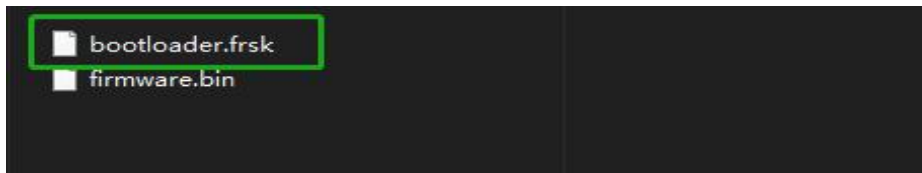

### STEP 6

Then click the **[Click to flash the bootloader]** section to start the **[Flash]**.

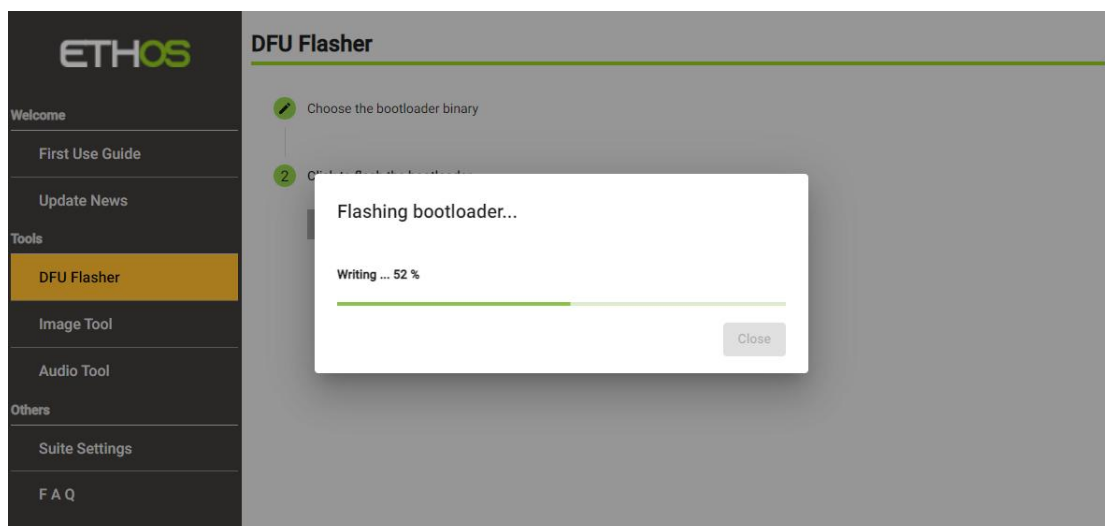

Welcome

First Use Guide

Update News

Tools

DFU Flasher

Image Tool

Audio Tool

Others

Suite Settings

F A Q

1 Choose the bootloader binary

2 Click to flash the bootloader

Bootloader flashed successfully!

Close