

1. Introduction

1.1 Compatibility:

FASST 2.4G Air Systems (7CH Mode/Multi Mode): 6EX, 7C, TM-7, TM-8, T8FG, T10C, TM-10, T10CG, T12Z, T12FG, TM-14, T14MZ, etc.

 
1.2 Specifications:

Number of Channels: 7

Operating Voltage Range: 3.5V~10V

Dimension: 37*22*8mm(TFR6) / 45*22*14mm(TFR6-A)

Weight: 7.8g(TFR6) / 10g (TFR6-A)



1.3 Features:

- 1) Lighter weight and physically smaller;
- 2) Two selectable failsafe setting options.

2. Setup

2.1 Bind procedure:

Turn on the transmitter, connect the battery to the receiver while pressing receiver's F/S button. After the RED LED is off and GREEN LED is solid, the binding process is completed and the receiver is operating normally.

2.2 Setting failsafe:

TFR6/TFR6-A support two selectable failsafe setting options, either use native failsafe position preset on the transmitter side, or set failsafe on TFR6/TFR6-A.

2.2.1 Use native failsafe position preset on the transmitter side:

If not disabling failsafe on the transmitter side, TFR6/TFR6-A will use native failsafe position preset on the transmitter side.

2.2.2 Set failsafe on TFR6/TFR6-A :

TFR6/TFR6-A supports failsafe function for all channels. Follow the steps below to set failsafe on TFR6/TFR6-A:

- 1) Bind the receiver first, and disable failsafe on the transmitter side;
- 2) Set all transmitter controls to the desired failsafe position;
- 3) Press briefly the F/S button of the receiver, the GREEN LED of the receiver will flash twice, indicating the failsafe is set up successfully.

If you do not need the failsafe function any more, just re-bind the receiver to set default failsafe mode.

Hint: If not disabling failsafe on the transmitter side, TFR6/TFR6-A will use native failsafe position preset on the transmitter side.

2.3 LED Status:

RED LED	GREEN LED	Mode
Off	On	Normal mode
On	On	Waiting to be bound
Flashing	On	Signal lost
On	Flashing twice	Set failsafe